

# MASSAGE

## CONTROL CONFIGURATIONS



JET MASSAGE

**Jet Massage System**  
*Without Lights*



**Jet Massage System**  
*With Lights*



AIR MASSAGE

**Air Massage System**  
*Without Lights*



**Air Massage System**  
*With Lights*



DUAL MASSAGE

**Dual Massage System**  
*Without Lights*



**Dual Massage System**  
*With Lights*



# MASSAGE INSTRUCTIONS



## **Jet Massage Control**

### *For Hydro Jet Massage Systems*

This function turns the jet massage system on and off. Press the button once to activate the jet massage system and once to turn the system off.



## **Jet Massage Pump Speed Control**

### *For Hydro Jet Massage Systems*

This function is used with the ON/OFF button to vary the speed of the pump between Hi, Medium and Low. When the ON/OFF button is activated you can turn the dial to one of the above setting to adjust the flow rate of the water.



## **Air Massage/Lights Control**

### *For Air Massage Systems, Jet Systems With Lights, and Air Systems With Lights*

This function is used to turn on and vary the flow rate of the air system. Push the button once to activate in Hi and again for Medium, Low, Wave and Off. If your hydro jet massage or air massage system is equipped with lights, a similar button will control the lights.



## **Jet Massage Control**

### *For Dual Systems With Lights*

This function operates the jet massage system in dual massage system tubs. Press the button on the left side to turn the tub jets ON and OFF. To change the strength of the jets, press the button on the right side and let the pressure of the jets change. Once you have reached the desired water pressure, press the button again to set the jets. A green light will come on to indicate the jets have been set. The jets will remain at that setting, even after the system has been turned off.